


Assembly instruction

Xilo-tree protection

Article-Nr.: F7


1. Attaching the first outer veneer

- > fix the 1st outer veneer with clamps

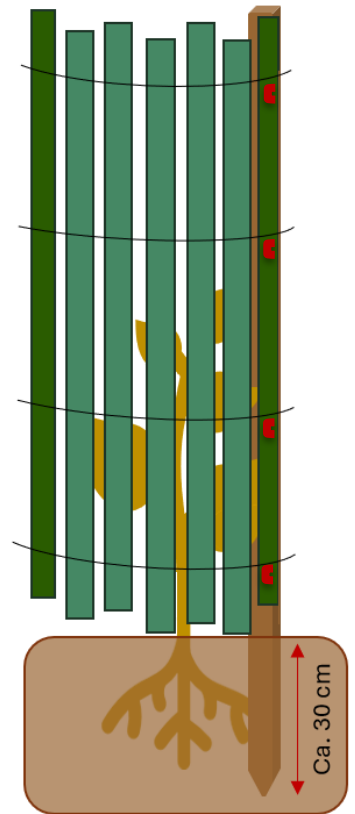

2. Attaching the second outer veneer

- (> guide the wires towards each other
- > tree is centered in the growth cover
- > fix the 2nd outer veneer with clamps

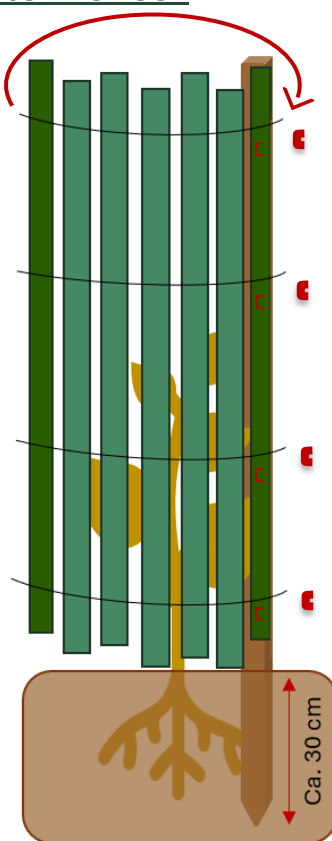

Make sure that

- the clamps are placed at least at the height of each wire
- the clamps are placed across the wood grain and lie flush, don't protrude and don't penetrate too deeply into the wood
- the wire isn't stapled on so that it can later fall to the ground and rot

